

Installation guide – Vision Dual Profile Cylinder

A. When the handle is installed, insert cylinders into the tray from the inside.

B. Secure the cylinders with the enclosed screws.


C. From the inside, assemble the lock cover with the unlocking mechanism.

Depending on your chosen Vision system and if the door is right- or left hinged, the lock cover needs to be placed in the right direction. Use the table to find your placement. Use the enclosed screws to fasten the lock cover.

1



2

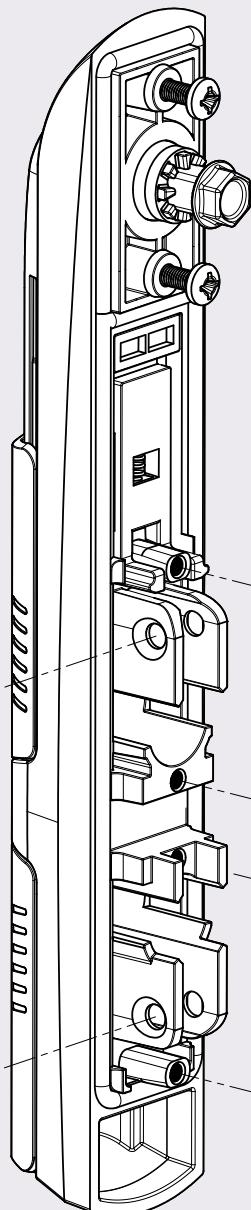

Picture	Hinge Side (from outside)	Type	Latching System	Article Number
2	Left Hinged Door	4-eyes	Vision Inside	1560-83265301-0X
2	Right Hinged Door	4-eyes	Vision Outside	1560-83265301-0X
1	Left Hinged Door	4-eyes	Vision Outside	1560-83265301-0X
1	Right Hinged Door	4-eyes	Vision Inside	1560-83265301-0X
2	Left Hinged Door	2-eyes	Vision Inside	1560-83265302-0X
2	Right Hinged Door	2-eyes	Vision Outside	1560-83265302-0X
1	Left Hinged Door	2-eyes	Vision Outside	1560-83265303-0X
1	Right Hinged Door	2-eyes	Vision Inside	1560-83265303-0X

A

B

C

1.5 Nm

0.5 Nm

0.5 Nm

1.5 Nm