


Striker Plate 1627 – Adjustment of Profile Pressure

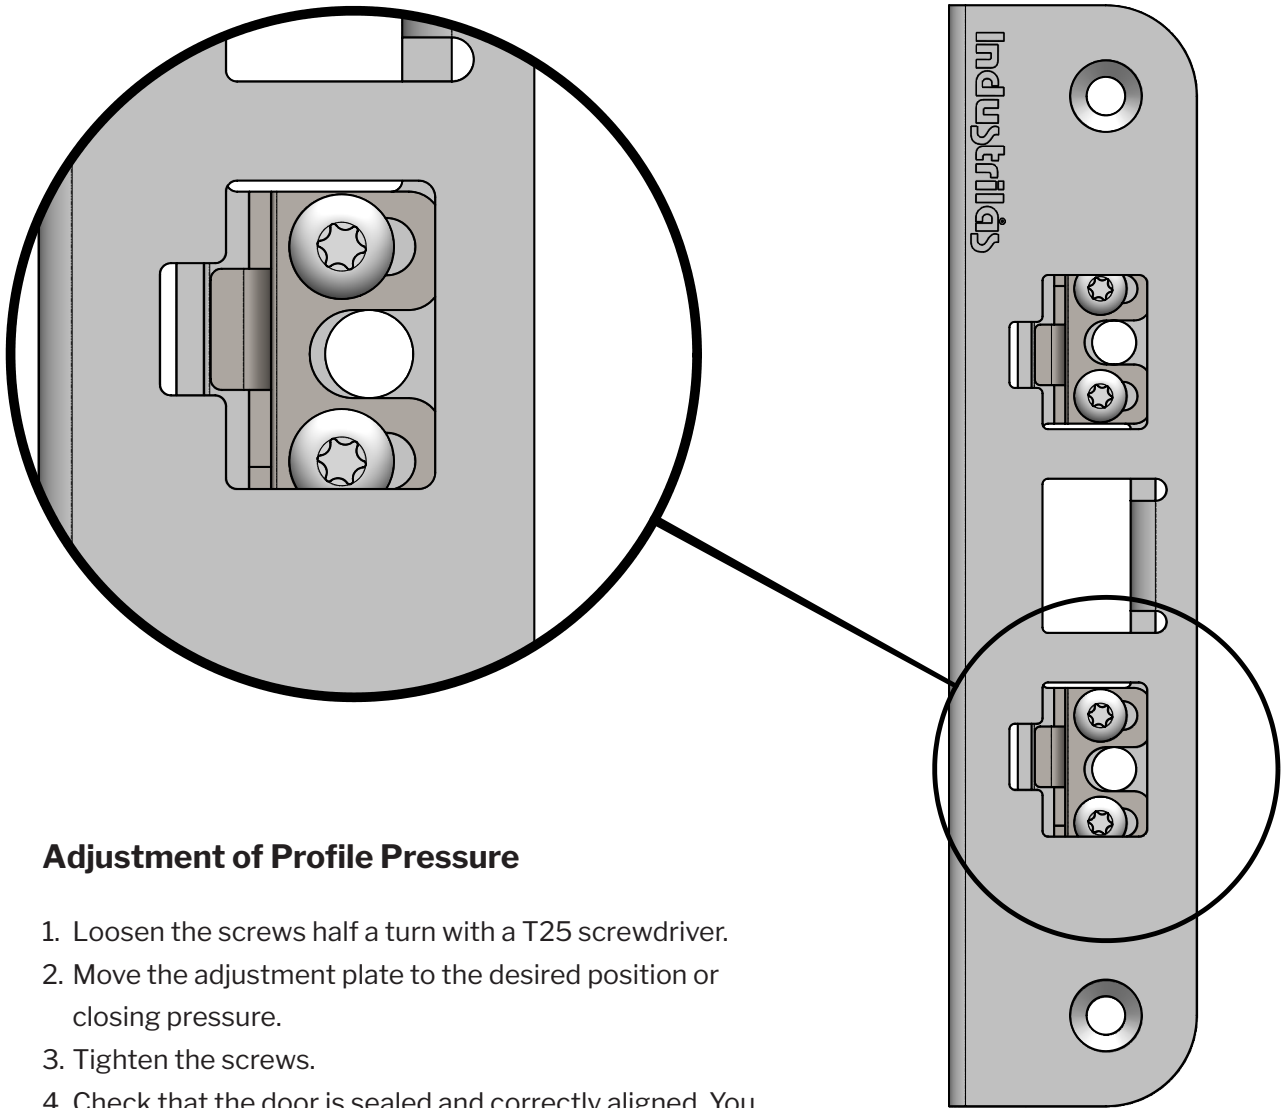

Adjustment of Profile Pressure

1. Loosen the screws half a turn with a T25 screwdriver.
2. Move the adjustment plate to the desired position or closing pressure.
3. Tighten the screws.
4. Check that the door is sealed and correctly aligned. You should be able to open, close, lock and unlock it smoothly.
5. Need further adjustment? Repeat steps 1 to 4.