


Keyless 200

Bruksanvisning



Industrilås
— When access counts —

I förpackningen

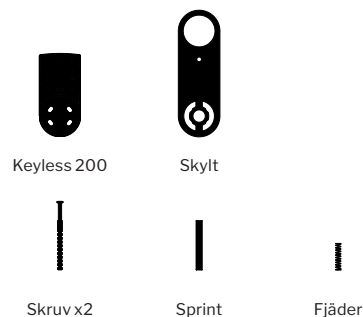

Innehåll

1. Montering av Keyless 200
2. Inkoppling, administratörskod och användarkod
3. Lägga in eller byta ut en användarkod
4. Låsa upp och låsa
5. Radera en användarkod
6. Val av hur du låser
7. Byt längd på låskoder
8. När batterierna tar slut
9. Automatisk blockering
10. Fabriksåterställning








Produktfakta och instruktionsfilmer på
industrilas.com


Läs detta innan du börjar

- Låset levereras utan programmerade koder.
- Vid inkoppling behöver du programmera en administratörskod och en användarkod.
- När du programmerat administratörskod och sedan är inne i huvudmenyn, indikeras varje rätt val med att den gröna och röda lampan blinkar snabbt två gånger.
- Du har alltid 30 sek på dig för att göra nästa val i programmeringen. Om du inte gör ett val inom denna tid, återgår låset till huvudmenyn, eller låses (om du redan är i huvudmenyn).
- Om du råkar trycka fel blinkar rött ljus och låset återgår till huvudmenyn.
- Är du i en undermeny kan du alltid trycka på låsknappen för att komma tillbaka till huvudmenyn.
- Trycker du på låsknappen när du är i huvudmenyn avslutas administratörsläget. Detta indikeras med att den gröna och röda lampan lyser med ett fast sken.
- Använd batterier av hög kvalitet

1. Montering av Keyless 200

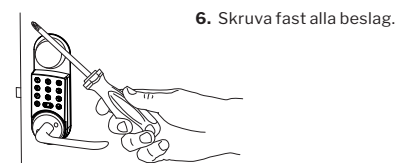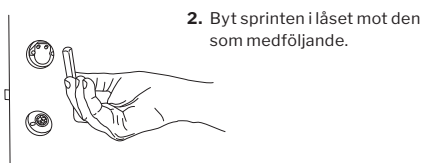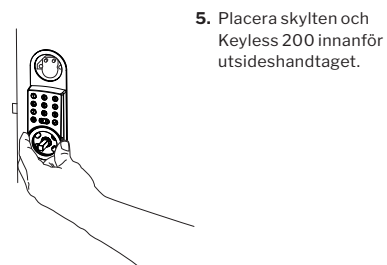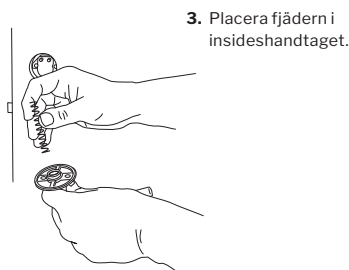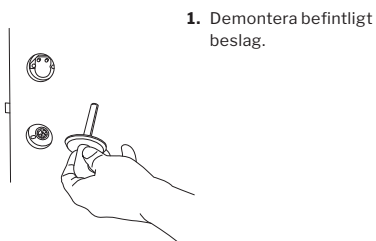

2. Inkoppling, administratörskod och användarkod

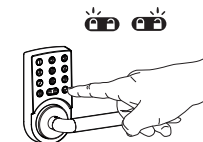


1. Väck låset för första gången genom att trycka på låsknappen. Rött och grönt ljus blinkar växelvis under några sekunder för att visa att det inte har några programmerade koder.
2. När låset blinkat klart, ange en 6-siffrig kod.
3. Verifiera koden genom att ange den igen.
4. Ange en 4-siffrig användarkod. Denna lagras automatiskt på position 1 (vill du hellre ha 5-, eller 6-siffriga användarkoder, se punkt 7 nedan).
5. Verifiera koden genom att ange den igen.
6. Nu är både administratörskod och en första användarkod programmerade.
7. För att byta administratörskoden, gå in i huvudmenyn, tryck på knapp 9 och ange sedan den nya koden genom att knappa in den två gånger. För att lägga till eller byta användarkoder, se avsnitt 3.

3. Lägga till eller byta ut en användarkod




- 1. Håll in knapp 9 i 5 sek.
- 2. När grönt ljus blinkar, knappa in administratörskoden.

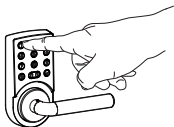


- 3. Tryck på knapp 1 för att lägga till eller byta ut användarkod.
- 4. Ange vilken position du vill spara koden på (1–9).
- 5. Ange en 4-siffrig kod (grönt ljus börjar blinka).

4. Låsa upp och låsa

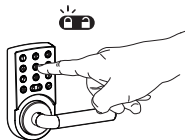

För att låsa upp: Ange din användarkod (grönt ljus tänds).

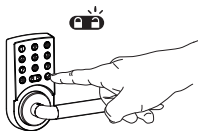


För att låsa: Tryck på låsknappen (röd indikering lyser en stund efter låset låsts). Vill du ändra hur du låser, se avsnittet Val av hur du låser.

5. Radera en användarkod



- 1. Håll in knapp 9 i 5 sek.
- 2. När grönt ljus blinkar, knappa in administratörskoden.

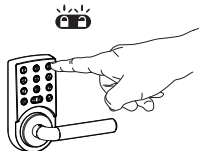

- 3. Tryck på knapp 3.
- 4. Ange positionen för koden du vill radera (1–9). Tryck 0 för att radera alla användarkoder.

- 5. Grönt och rött ljus blinkar samtidigt två gånger för att bekräfta val av position.
- 6. Ange positionen igen för att bekräfta.
- 7. Tryck på låsknappen eller vänta 30 sek för att lämna programmeringsläget.

6. Val av hur du låser

Det finns 3 låsfunktioner:

- 1. Lås med låsknapp: Du trycker på låsknappen för att låsa.
- 2. Lås med användarkod: Du anger giltig användarkod för att låsa.
- 3. Automatisk låsning: 10 sek efter upplåsning sker automatiskt låsning.



För att välja funktion, gör så här:

- 1. Håll in knapp 9 i 5 sek.
- 2. När grönt ljus blinkar, knappa in administratörskoden.
- 3. För låsfunktion 1, ange 711. För låsfunktion 2, ange 712. För låsfunktion 3, ange 713.
- 4. Tryck på låsknappen eller vänta 30 sek för att lämna programmeringsläget.

7. Byt längd på låskoder

Du kan välja mellan tre olika längder på låskoderna: 4, 5 eller 6 siffror (administratörskoden är alltid 6 siffror). Alla låskoder har samma längd och om du byter längden på låskoderna raderas alla tidigare låskoder och nya behöver anges.




För att välja längd, gör så här:

- 1. Håll in knapp 9 i 5 sek.
- 2. När grönt ljus blinkar, knappa in administratörskoden.
- 3. För 4-siffriga koder, ange 724. För 5-siffriga koder, ange 725. För 6-siffriga koder, ange 726.
- 4. Tryck på låsknappen eller vänta 30 sek för att lämna programmeringsläget.

8. När batterierna tar slut

- Vid normal användning håller batterier av hög kvalitet i ca 2–3 år.
- Byt batterier (2 st typ AAA) när röd indikering börjar blinka när du anger din kod.
- Samtliga koder finns kvar efter batteribyte.
- Blanda inte använda och nya batterier.
- Släng förbrukade batterier enligt miljöanvisningar.
- För att byta batterier behöver låset monteras ner.

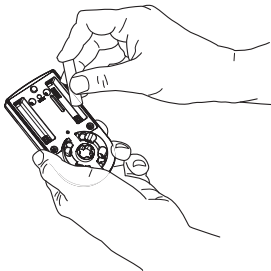

9. Automatisk blockering

Om fel användarkod anges 4 gånger kommer låset att blockeras. Detta indikeras genom att den röda lampan blinkar långsamt. För att komma ur blockeringen måste en korrekt användarkod anges två gånger.

10. Fabriksåterställning

För att göra en fabriksåterställning måste låset demonteras. Tryck därefter på låsuppknappen och håll sedan RESET intryckt i 3 sek. När fabriksåterställning är gjord blinkar rött och grönt ljus i 5 sek.

Fabriksinställning innebär att administratörskoden och samtliga användarkoder raderas. Låsfunktionen återställs till att låsknappen låser låset och till att koder ska vara 6 siffror långa.

När låset har blinkat klart, behöver administratörskod anges på nytt innan låset kan användas.


Keyless 200

User Manual



IndustriLås
— When access counts —

In the Package

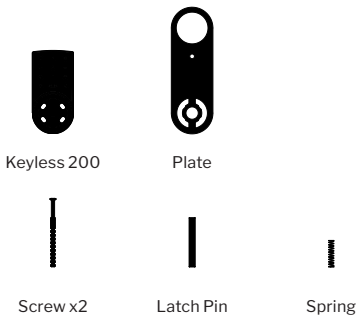

Content

1. Installation of Keyless 200
2. Connection, administrator code and user code
3. Adding or replacing a user code
4. Unlocking and locking
5. Deleting a user code
6. Selecting locking method
7. Changing code length
8. When the batteries run out
9. Automatic blocking
10. Factory reset




Product details and how-to videos at
industriilas.com

Read This Before You Start


- The lock is delivered without any pre-programmed codes.
- During the initial setup, you must programme an administrator code and a user code.
- When you have programmed the administrator code and entered the main menu, each correct selection is confirmed by the green and red lights flashing rapidly twice.
- You always have 30 seconds to make your next selection during programming. If no selection is made within this time, the lock returns to the main menu or locks (if you are already in the main menu).
- If you press the wrong button, the red light will flash and the lock will return to the main menu.
- When in a submenu, you can always press the lock button to return to the main menu.
- Pressing the lock button while in the main menu exits administrator mode. This is indicated by both the green and red lights shining steadily.
- Always use high-quality batteries.

1. Installation of Keyless 200


- 1.** Remove the existing handle set.

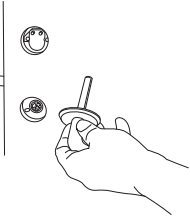


- 3.** Insert the spring into the inner handle.

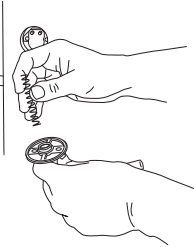


- 2.** Replace the latch pin with the one supplied.

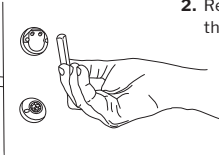


- 4.** Insert 2 high-quality AAA batteries.

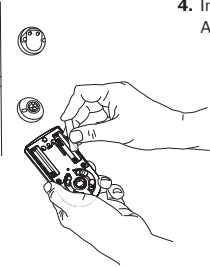


- 5.** Place the plate and Keyless 200 on the inside of the outer handle.

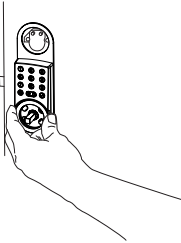

- 6.** Secure all parts with screws.

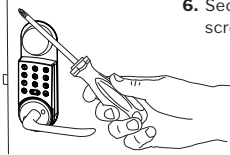

2. Setup, Administrator Code and User Code

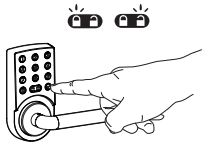


- 1.** Wake up the lock for the first time by pressing the lock button. The red and green lights will flash alternately for a few seconds, indicating that no codes are programmed.
- 2.** When the flashing stops, enter a 6-digit code.
- 3.** Verify the code by entering it again.
- 4.** Enter a 4-digit user code. This will automatically be stored in position 1 (if you prefer 5- or 6-digit user codes, see point 7 below).
- 5.** Verify the code by entering it again.
- 6.** Both the administrator code and the first user code are now programmed.
- 7.** To change the administrator code, enter the main menu, press button 9, then enter the new code twice. To add or change user codes, see section 3.

3. Adding or Replacing a User Code




- 1. Hold button 9 for 5 seconds.
- 2. When the green light flashes, enter the administrator code.

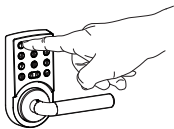


- 3. Press button 1 to add or replace a user code.
- 4. Select the position where the code will be stored (1–9).
- 5. Enter a 4-digit code (the green light starts flashing).


4. Unlocking and Locking

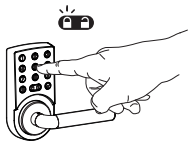

- 6. Verify the code by entering it again (the green light shines steadily).
- 7. Press the lock button or wait 30 seconds to exit programming mode.

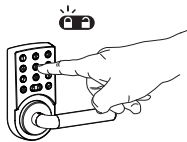

To unlock: Enter your user code (the green light turns on).

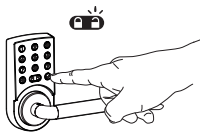


To lock: Press the lock button (the red light will illuminate briefly after the lock has been secured). If you wish to change the locking method, see **Selecting Locking Method**.

5. Deleting a User Code



- 1. Hold button 9 for 5 seconds.
- 2. When the green light flashes, enter the administrator code.

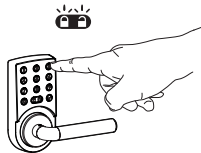

- 3. Press button 3.
- 4. Enter the position number of the code you want to delete (1–9). Press 0 to delete all user codes.
- 5. The green and red lights will flash twice simultaneously to confirm the selection.
- 6. Enter the position number again to confirm deletion.
- 7. Press the lock button or wait 30 seconds to exit programming mode.

6. Selecting Locking Method

There are three locking options:

- 1. Lock using the lock button: Press the lock button to lock.
- 2. Lock using user code: Enter a valid user code to lock.
- 3. Automatic locking: The lock will automatically engage 10 seconds after unlocking.



To select a locking function:

- 1. Hold button 9 for 5 seconds.
- 2. When the green light flashes, enter the administrator code.
- 3. For lock function 1, enter 711.
For lock function 2, enter 712.
For lock function 3, enter 713.
- 4. Press the lock button or wait 30 seconds to exit programming mode.

7. Changing User Code Length

You can choose between three code lengths: 4, 5 or 6 digits (the administrator code is always 6 digits). All lock codes must be the same length. Changing the code length will delete all previously stored codes, and new ones must be entered.




To change the code length:

- 1. Hold button 9 for 5 seconds.
- 2. When the green light flashes, enter the administrator code.
- 3. For 4-digit codes, enter 724.
For 5-digit codes, enter 725.
For 6-digit codes, enter 726.
- 4. Press the lock button or wait 30 seconds to exit programming mode.

8. When the Batteries Run Out

- With normal use, high-quality batteries last approximately 2–3 years.
- Replace the batteries (2 x AAA) when the red light starts flashing while entering your code.
- All codes remain stored after battery replacement.
- Do not mix old and new batteries.
- Dispose of used batteries according to environmental regulations.
- To replace the batteries, the lock must be disassembled.

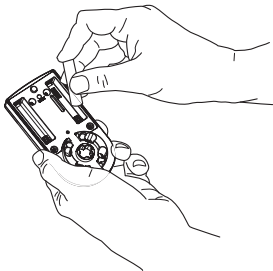

9. Automatic Blocking

If an incorrect user code is entered four times in a row, the lock will be blocked. This is indicated by the red light flashing slowly. To exit blocking mode, a correct user code must be entered twice.

10. Factory Reset

To perform a factory reset, the lock must be disassembled. Then press the unlock button and hold the RESET button for 3 seconds. When the reset is complete, the red and green lights will flash for 5 seconds.

A factory reset erases the administrator code and all user codes. The locking function is restored to default, meaning the lock button locks the unit and codes are set to six digits in length.

Once the flashing stops, a new administrator code must be programmed before the lock can be used again.