

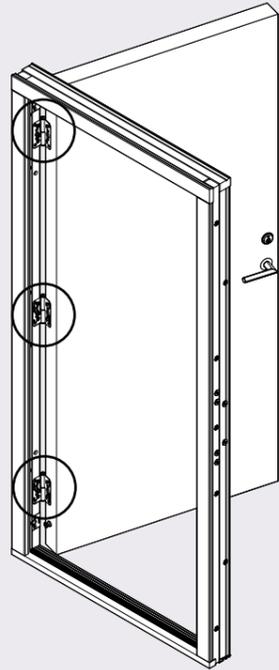


# Use of Frame Screws for RC Classification


To maintain the door's RC classification, the supplied frame screws must be fastened as described below.

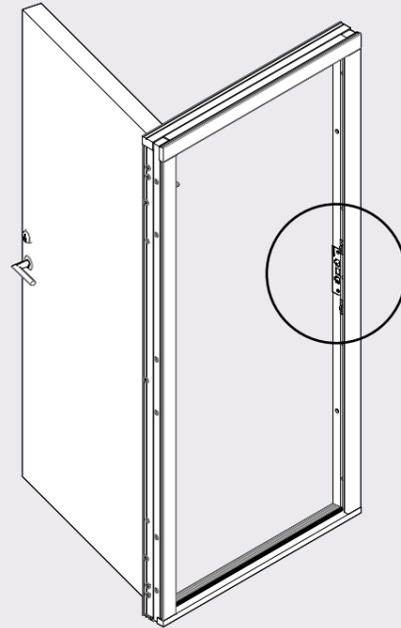


1. Unscrew the mushroom pins from the hinges.

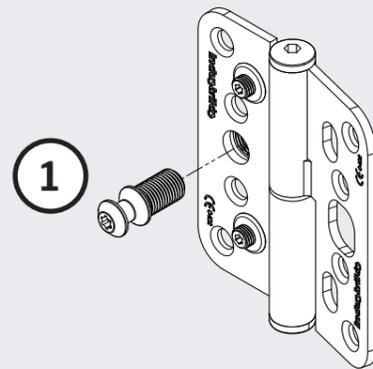



2. Remove the screws from the security bracket.
3. Remove the security bracket.
4. Remove the threaded sleeves.

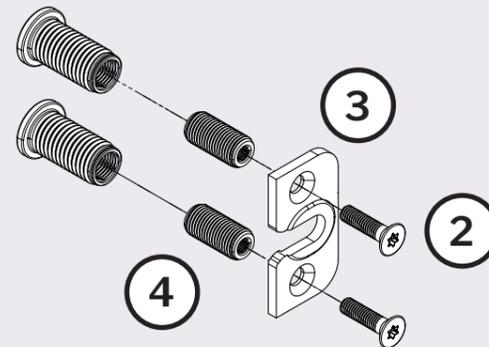

5. Remove the screws from the strike plate.
6. Remove the strike plate.
7. Remove the threaded sleeves.

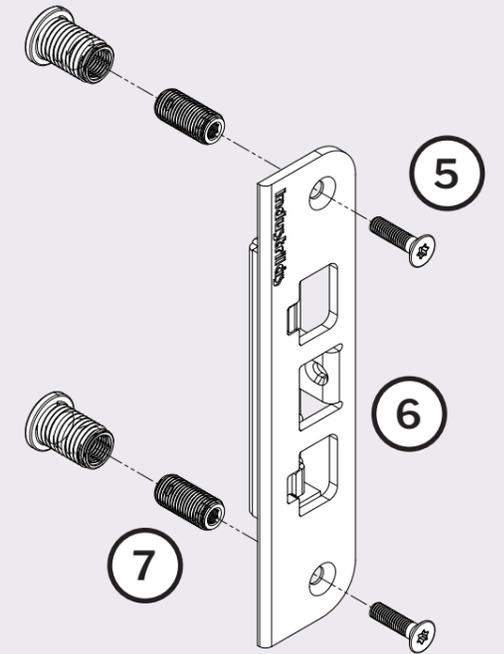

8. Adjust the frame sleeves so that the door is firmly secured and level.

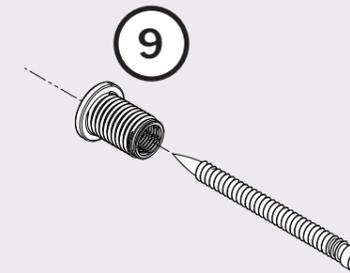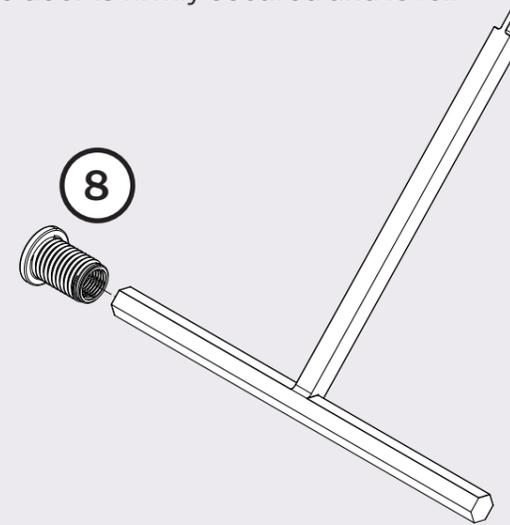

9. Screw the frame screws through the frame sleeves.

10. **Hinges:** Reinstall the mushroom pins.

11. **Strike plate:** Reinstall the threaded sleeves, refit the strike plate, and fasten the screws.

12. **Security fitting:** Reinstall the threaded sleeves, refit the security bracket, and fasten the screws.