


## VISION Inside - Cabinet design example

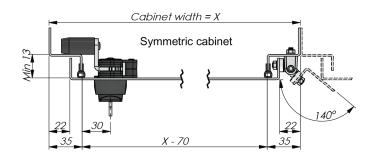


### Symmetric frame, surface mounted door

 $\label{lem:covering} \mbox{Cabinet with standard frame. Door is not covering} \\ \mbox{the total width of frame. Visible hinges.}$ 

Opening angle door: 140°

## Related products

- Swing or lift handles, escutscheon (various)
- External hinge 180° (3-451)
- Sealing profiles

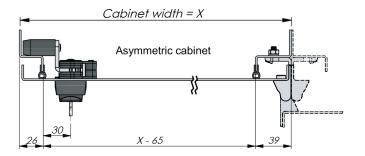

# Asymmetric frame, surface mounted door, joined cabinets

Minimized space for frame design, maximized usable cabinet width. External hinges optional with earthing kit.

Opening angle door:  $180^{\circ}$ 


#### Related products

- Swing or lift handles, escutscheon (various)
- Hinge for doors with adjacent cabinets 180° (3-310)
- Sealing profiles

## Asymmetric frame, surface mounted door

Minimized space for frame design, maximized usable cabinet width. Concealed hinges.

Opening angle door: 120°

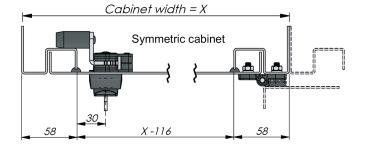


#### Related products

- Swing or lift handles, escutscheon (various)
- Concealed lift off click hinge 120° (3-094 & 3-095)
- Sealing profiles

## Symmetric frame, flush door

For flush mounted doors, minimized space for frame design, maximized usable cabinet width. External hinges, optional lift off function.

Opening angle door: 180°

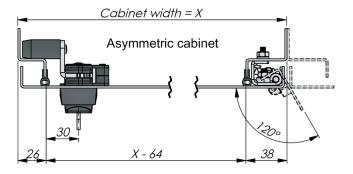

#### Related products

- Swing or lift handles, escutscheon (various)
- External hinge 54x43 mm 180° (3-328)
- External lift off hinge 80x65 mm 180° (3-413)
- Sealing profiles